

RP70A BIO Quick Manual



Gen2Wave Co.,Ltd


Package



RP70A BIO



Adapter, AC Cord, USB Cable

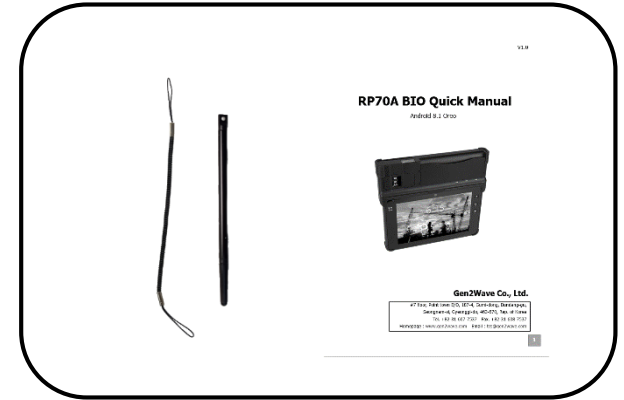

Stylus Pen, String, Quick Manual




Handstrap




Leather Case (optional)

NOTE. Items in the box may be changed according to the purchase order.

Device Features - 1

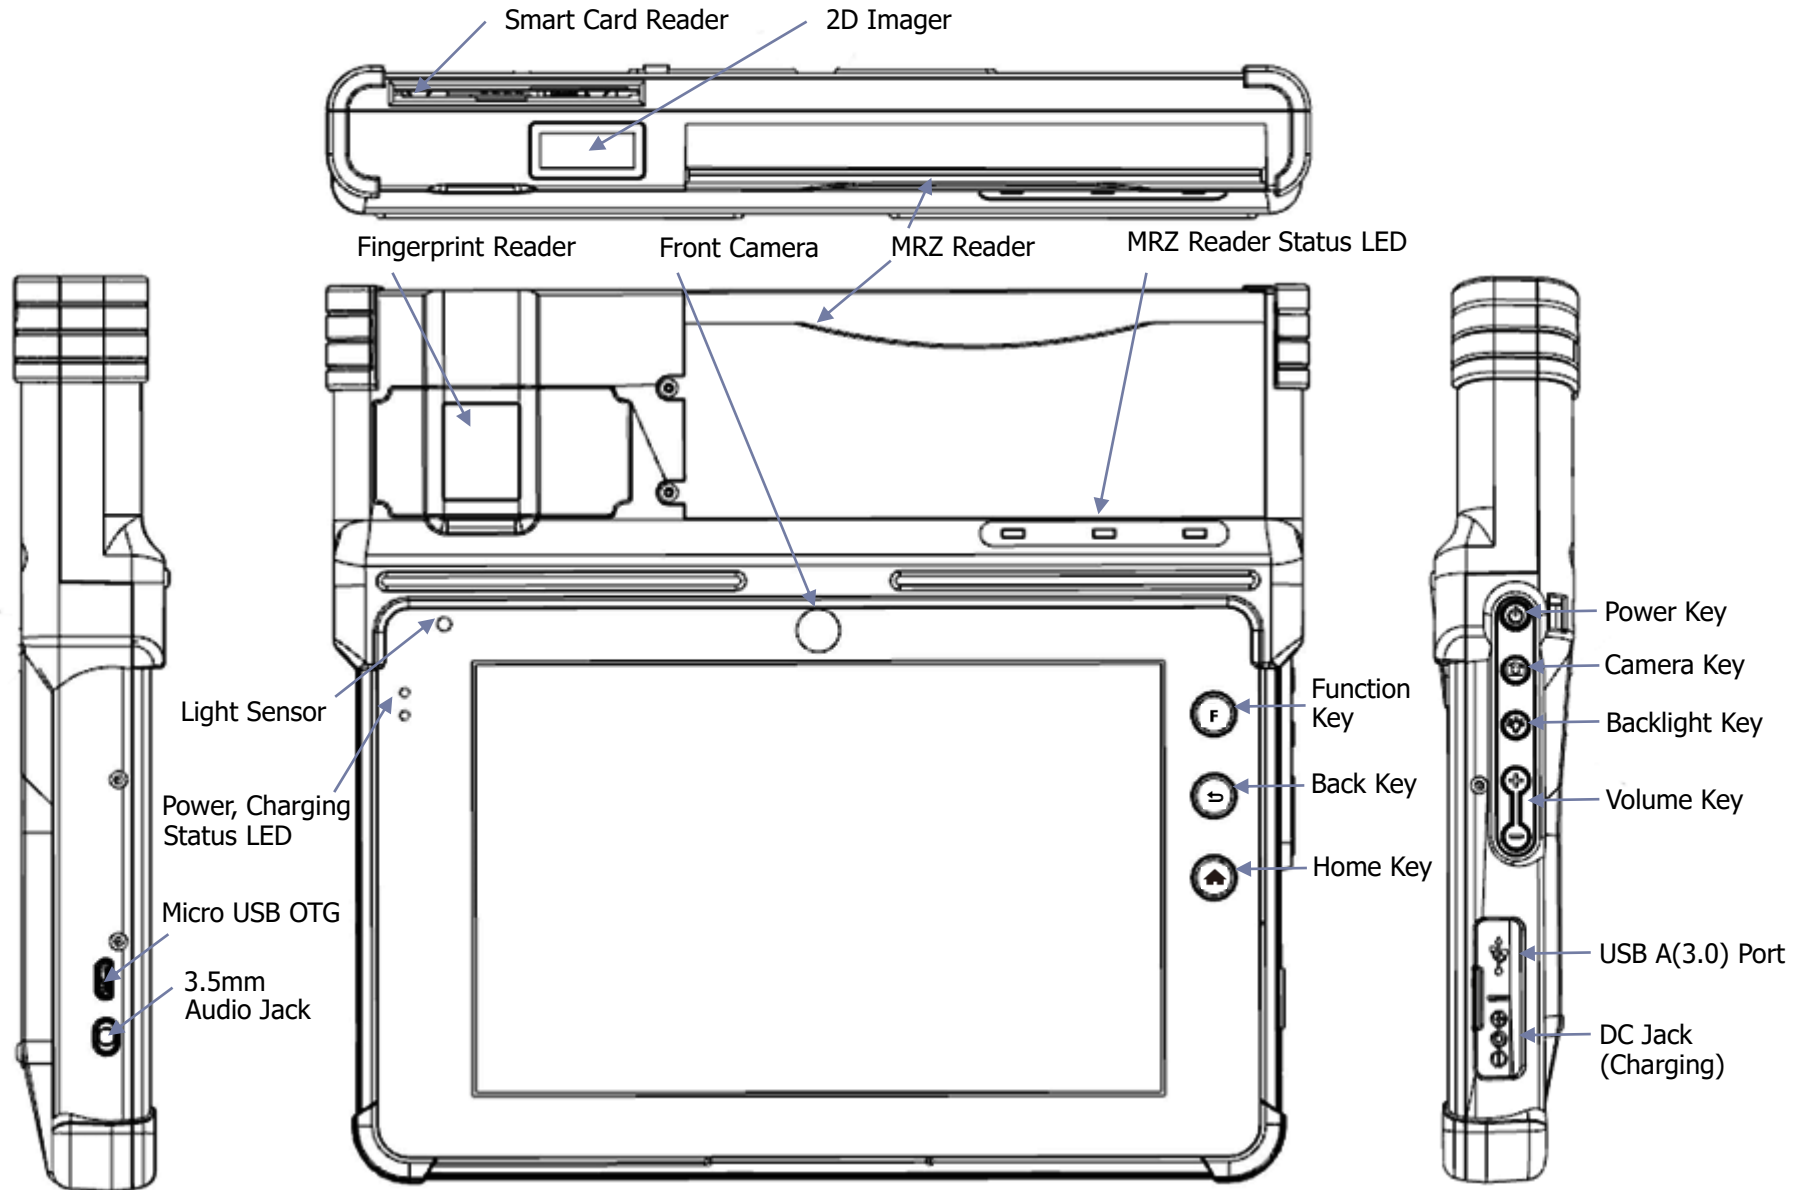

Device Features - 2

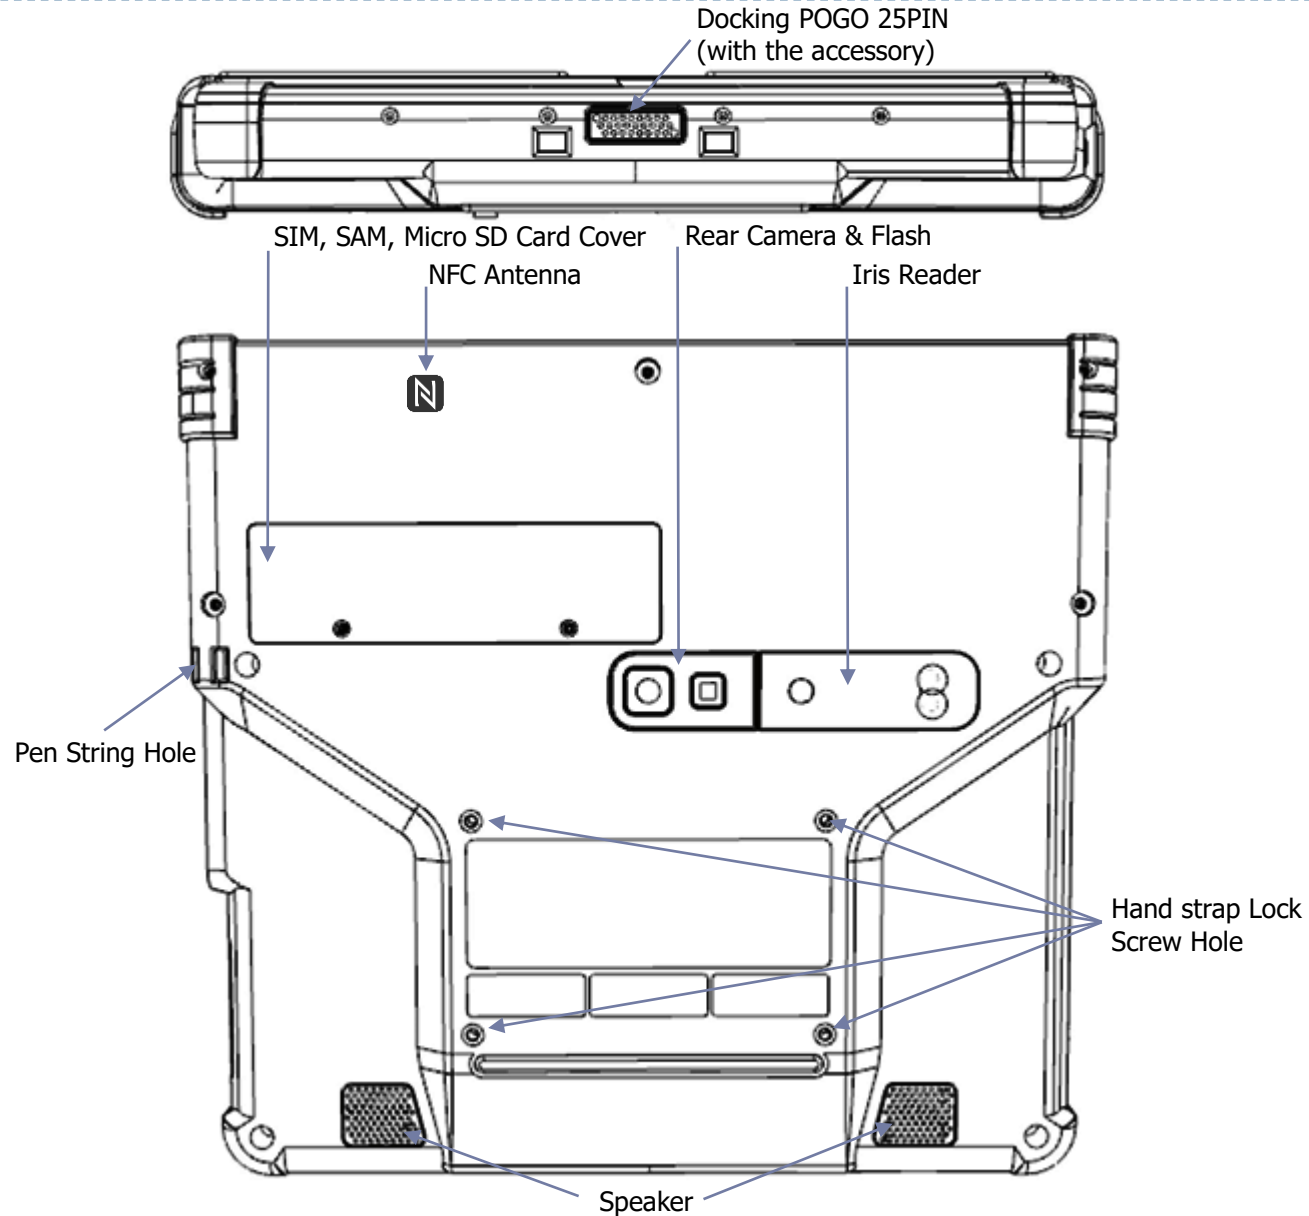


Card Installation

▶ How to Insert SIM/SAM cards and a MicroSD card

- ① Remove the two screws on the SIM, SAM, Micro SD Card Cover. (Driver Plus Type)
- ② Slide the locker of "SIM, SAM or Micro SD cards" upwards until you hear a "click" sound and then open the locker .
- ③ Slide the "SIM, SAM or Micro SD cards" into the card slot as shown in the picture.
- ④ Cover the locker and slide it downwards to lock it until when you hear a "click" sound.
- ⑤ Put the cover on the RP70A BIO and tighten the screws.

▶ "SIM, SAM or Micro SD cards" can be removed in the reverse order.

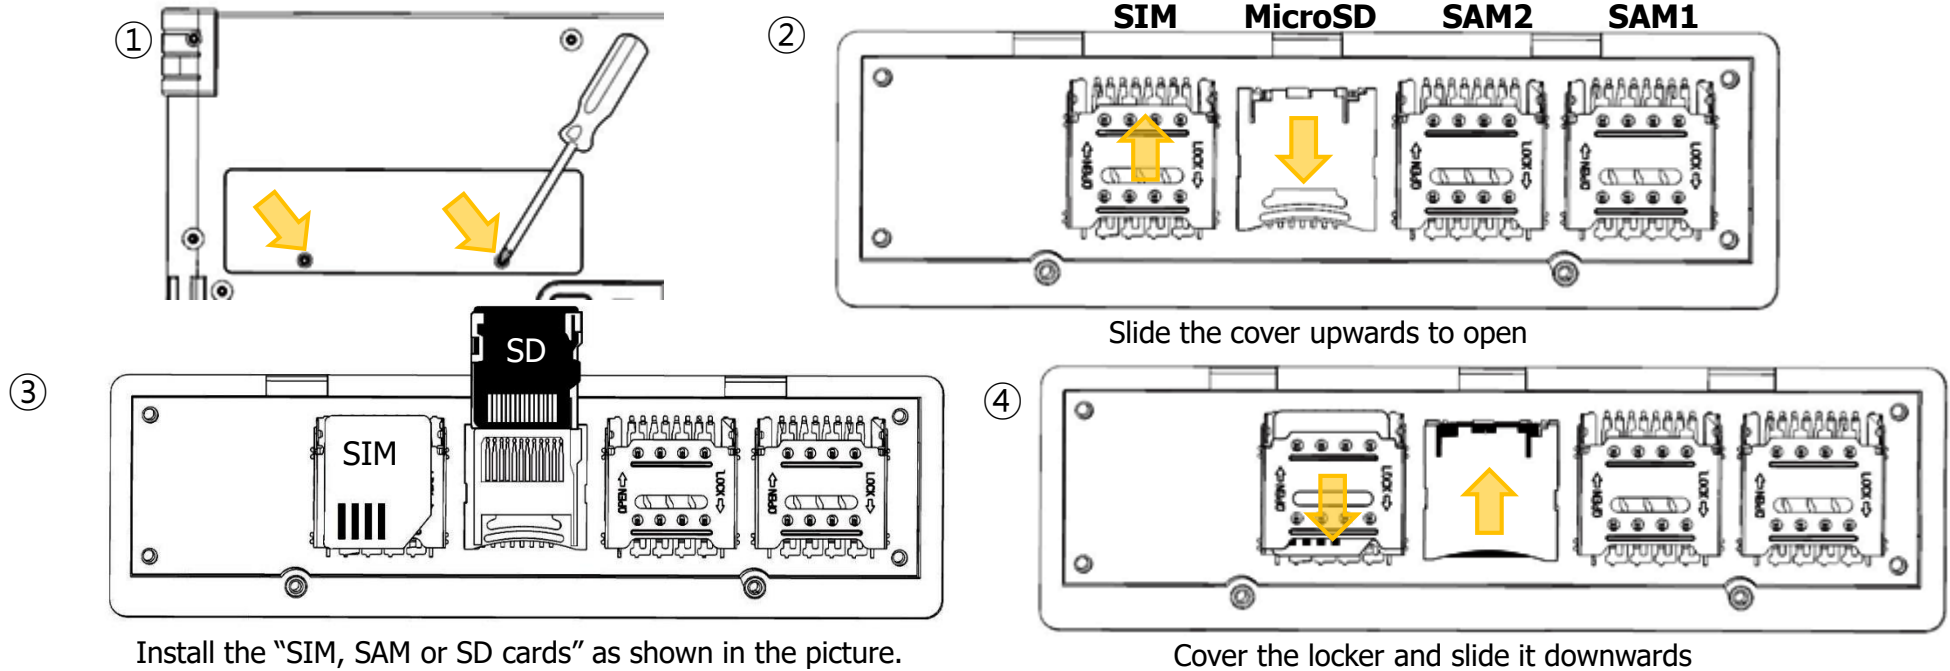

Caution. If you install or change SIM card when device is turned on, you should reboot the device afterward.

Charging Interface




▶ AC Charging

- ① Open the "USB & DC Jack" Cover.
- ② Insert the DC Jack in the DC Jack hole.
- ③ Battery LED indicates as follows

▶ OFF : Not Charging

Red LED : Charging

Green LED : Fully Charged

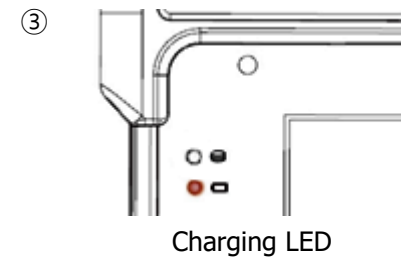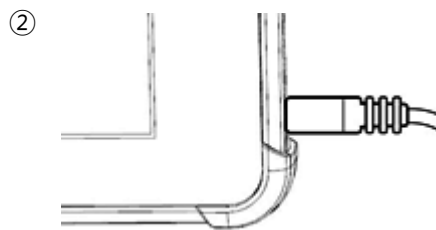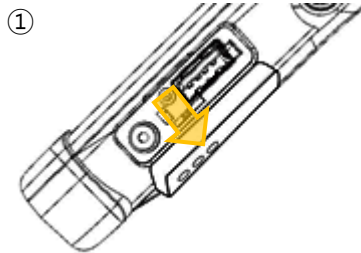

▶ Micro USB Charging

- ① Use as USB charger to charge the terminal from a power outlet or connect the cable to a high-power USB port to charge from a host device
- ② Battery LED indicates as follows :




▶ OFF : Not Charging

Red LED : Charging

Green LED : Fully Charged

※ Adapter voltage must be 5V and current is 2A or higher recommended.

Charging the battery though a USB port of PC or laptop, or using non recommended output adaptor takes more time

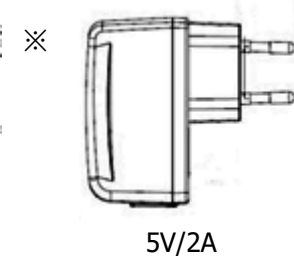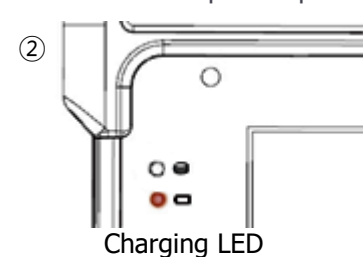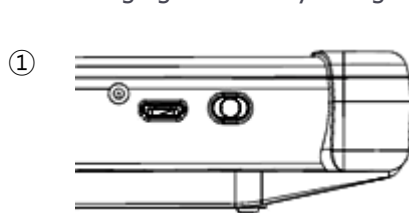

Caution. When you use the device for the first time or after time or after not using for long period of time, please charge enough time before using. Even though you connect the charger, the device may not turn on in the very low voltage state. Please charge the device for 30 minutes ~ 1 hour first. The device will turn on automatically and the charge LED will turn on red.

How to use functions

Barcode Scanner




Good




Bad

A LED aimer should be on the center of barcodes to get a successful read.

MRZ Reader

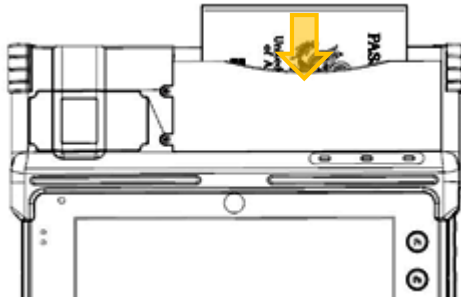


Insert the Passports or ID cards with the OCR printed page facing the back of the terminal as shown.

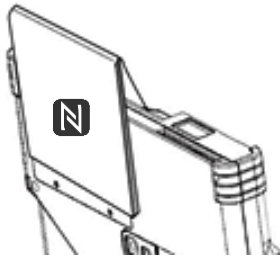


For passports, match the NFC chip of the passport to the NFC antenna on the device as shown.

Smart Card Reader

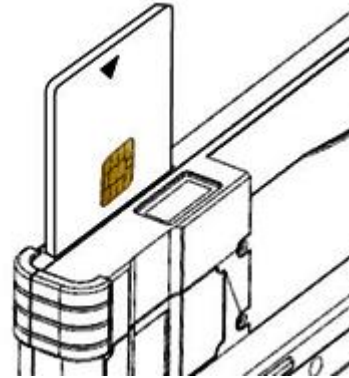

Insert the Smart Cards with the metal contacts in the direction of the picture.

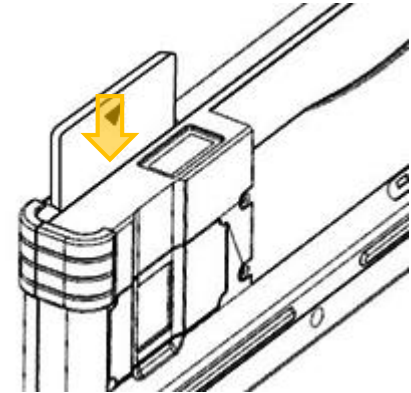


Press the Smart Cards downward until it clicks.

Iris Reader



Place both eyes on the screen and adjust the distance to the front and back until it recognize the IRIS.

Fingerprint Reader

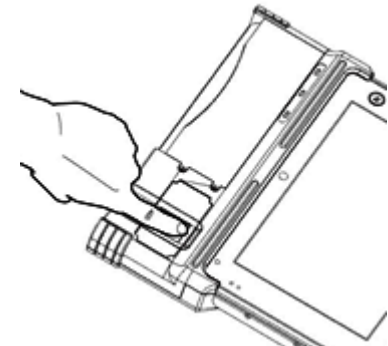

Scan your finger on the fingerprint reader as shown.

How to use power

- ▶ Power On
 - Press the power button to turn on the device.
 - Android logo appear on a screen, and the power LED turns on after a short while.
- ▶ Power Off
 - Press the power button until the menu appears and touch Power off.
- ▶ Soft Reset
 - Press and hold the power button to perform a Soft Reset and touch Restart.
- ▶ Hard Reset
 - Press and hold the power button for approximately 7 seconds to perform a Hard Reset.
- ▶ Factory Reset
 - Follow the below steps to perform a Factory Reset.
 - Path : Settings → System → Reset options → Erase all data (factory reset) → RESET TABLET

Caution. Factory Reset : Erase all data and restore default settings.

NOTE. Not all features are available for all RP70A BIO
(Features may vary based on the released option of a RP70A BIO)